

Please store with ATV Manuel

Arctic Cat XR Deflector TRL-12

Read all instructions prior to assembly

Step 1 Install U-clamps to the handle-bar with conical washers as shown on the picture below.

Step 2 Install left and right, upper and lower supports, on ATV Windshield base. Do not tighten, keep loose for later adjustment.

Step 3 Install the windscreen, on windshield base, by using the 6 dome-head screws, 6 rubber-washers and 6 cone-nuts.

Step 4 Install mirrors by using drilled holes on deflector base. (Read instruction enclose in mirrors packing).

Step 5 Fix the windshield to the U-clamps, already mounted on the handlebar, make adjustment to prevent rubbing when you turn the handlebars. You can, if necessary, adjust the angle of the handlebars to lift-up the windshield




Vip-Air inc reserves the right to repair or replace free of charge, parts judged defective due to manufacturing or raw material defects, with a part of choice. **VIP-AIR** also reserves the right to judge damage is due to abusive use on behalf of the consumer either through improper maintenance or handling. VIP-AIR inc. is not affiliated to any ATV marks

Parts

Deflector Arctic Cat XR MODEL TRL-12

Ref.	# Number	Description	Qty.
1	# according to color	Deflector base Model TRL-12	1
2	54-999-XP	6 holes clear windscreen	1
3	54-VIPA-1	Hex bolt 1/4" X 5/8" L	6
4	51-811-15	Upper left Support	1
5	51-810-15	Upper Right support	1
6	51-834	U clamp 7/8" 5 holes	2
7	51-999-12	Conic washer	4
8	51-812-15	Lower right support	1
9	51-813-15	Lower left Support	1
10	51-999-39	Hex Bolt 3/8" X 1 3/4"	4
11	51-999-22	Flange nut 3/8" NC	4
12	51-999-37	Bottom socket round cap screws with 6 hollow side 1/4 - 20 NC x 1/2" LG	10
13	51-999-35	Flange nut 1/4" - 20 NC	8
14	VIPA-2	1/4 " Cone nut	6
15	54-116125-001	Rubber washer	6
16	51-20565	Mirrors kit left and right	1
17	54-CL-10-PPK-1	Quick release nut ears	

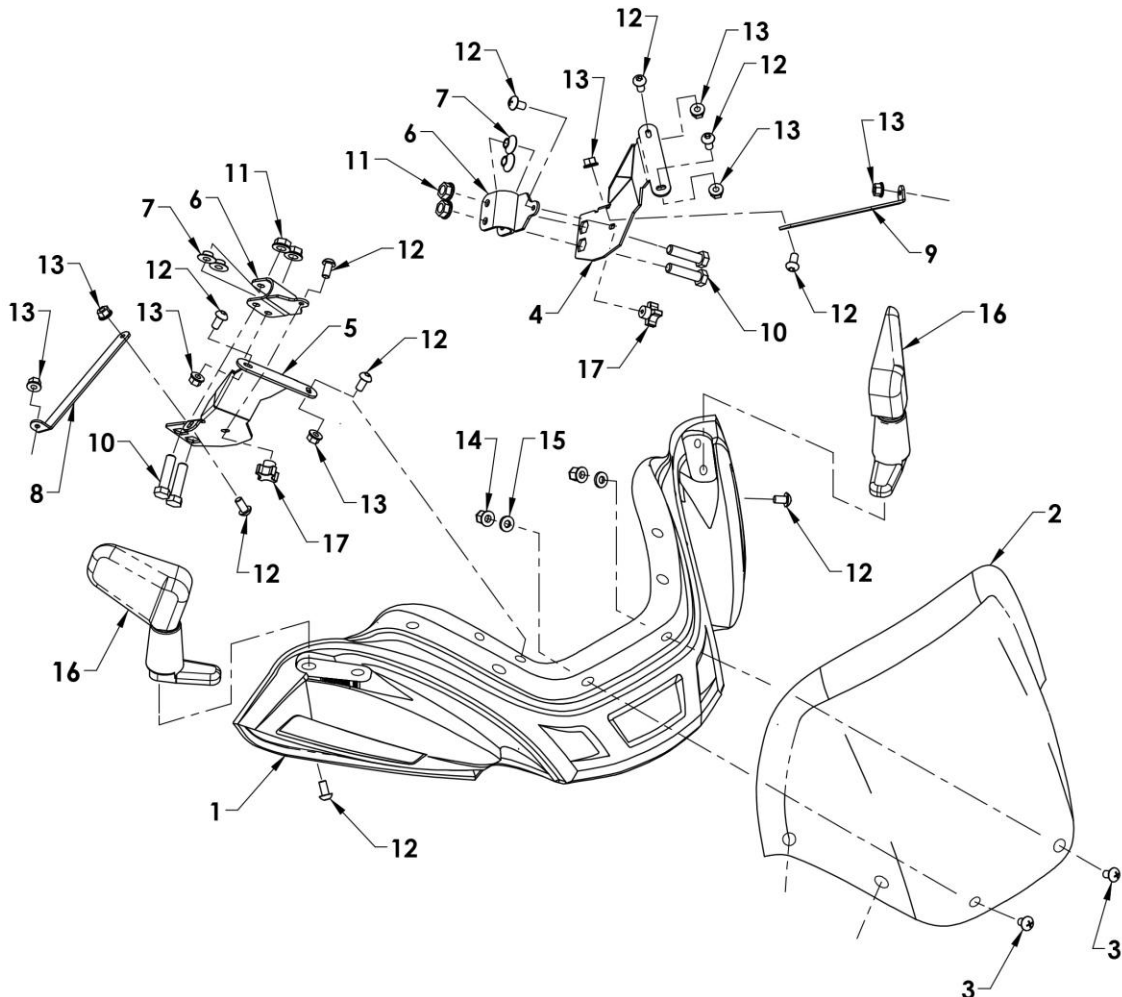

À CONSERVER AVEC LE MANUEL DU VTT QUAD

Déflecteur Arctic Cat XR Modèle TRL-12

Lire toutes les instructions avant l'installation

Étape 1 Installer les deux collets aux guidons avec les rondelles coniques tel que montré sur la photo.

Étape 2 Installer les supports, supérieur et inférieur, gauche et droit, à la base du pare-brise. Ne pas serrer (Garder desserré pour ajustement ultérieur et final).

Étape:3 Installer la visière à la base du pare-brise en utilisant les 6 vis à tête bombée, 6 rondelles de caoutchouc et 6 cônes écrous.

Étape:4 Installer les miroirs, à l'endroit désigné par les trous percés, à la base du déflecteur.
Lire le guide d'installation inclus dans l'emballage des miroirs.

Étape:5 Installer le pare-brise aux collets, déjà montés au guidon, ajuster le pare-brise de façon à éviter le frottement lorsque vous tournez les guidons. Vous pouvez, si nécessaire, ajuster l'angle du guidon pour remonter le pare-brise.



Vip-Air inc se réserve le droit de réparer ou de remplacer sans frais, à leur choix, toute pièce jugée défectueuse en raison d'un vice de matériaux ou de fabrication. Elle se réserve aussi le droit de déterminer si une mauvaise utilisation en a été la cause, soit par manque d'entretien, mauvaise utilisation ou une utilisation abusive de la part du client.

Pièces

Pare-brise Arctic Cat XR MODÈLE TRL-12

Ref.	# Number	Description	Qty.
1	# selon la couleur	Base de déflecteur modèle TRL-12	1
2	54-999-XP	Visière Claire 6 trous 17"	1
3	54-VIPA-1	Boulon 1/4" 20 NCX 5/8" L	6
4	51-811-15	Support supérieur Gauche	1
5	51-810-15	Support supérieur Droit	1
6	51-834	Collet 2" Noir (5 trous)	2
7	51-999-12	Rondelle conique	4
8	51-812-15	Support inférieur droit	1
9	51-813-15	Support inférieur gauche	1
10	51-999-39	Boulon à tête hexagonale 3/8" X 1 3/4"	4
11	51-999-22	Écrou à bride 3/8" NC	4
12	51-999-37	Vis à pans creux ronds avec 6 côtés creux 1/4 - 20 NC x 1/2" LG	10
13	51-999-35	Écrou à bride 1/4" - 20 NC	8
14	VIPA-2	1/4" Écrou conique	6
15	54-116125-001	Rondelle en caoutchouc	6
16	51-20565	Miroir gauche et droit	1
17	54-CL-10-PPK-1	Écrou d'attache rapide	2

